Please completely read and understand the entire manual before using, assembling and/or disassembling your remote controlled car.

1/16TH SCALE 4WD ELECTRIC POWERED BUGGY/TRUGGY/MONSTER TRUCK

2.4GHz RADIO SYSTEM

INSTRUCTION MANUAL

OFF ROAD TRUGGY
ITEM NO.: 16882

OFF ROAD BUGGY
ITEM NO.: 16881

OFF ROAD MONSTER TRUCK
ITEM NO.: 16883

READY TO RUN

MODEL	NAME	LENGTH	WIDTH	HEIGHT	WHEELBASE	WHEEL SIZE	GEAR RATIO	MOTOR & BATTERY
16881	**BUGGY**	260mm	175mm	105mm	175mm	63mm(Dia.) 25mm(Width)	1: 9.28	RC 380 Motor & Li-ion Battery Pack (7.4V, 800mAH)
16882	**TRUGGY**	265mm	205mm	110mm	175mm	70mm(Dia.) 40mm(Width)	1: 11.44	
16883	**MONSTER TRUCK**	270mm	215mm	135mm	175mm	80mm(Dia.) 45mm(Width)	1: 11.44	

Notification: This date is subject to change without the prior notice.

The series of cars are Ready to Run with battery pack of Li-ion 7.4V ,800mAH, the charger and the adapter of the charger which is needed for charging your li-ion battery pack.

The cars feature 3-in-1 unit (ESC/receiver/ 5 wire servo) and 2.4GHz radio system, which are called entry-level hobby grade products and suitable for R/C beginners. Ball bearings and brass bushes are installed throughout the whole vehicles.

Many optional parts are available from factory and please refer to the part lists. If you perform a drive train upgrade, replace the entire system (such as motor, ESC, receiver , ball bearings and the like) so that all components are properly matched. Any malfunction incurred by custom modification or incorrect operation will void your warranty.

- This product is not a toy. It is not intended for persons under 14 years of age, unless closely supervised by an adult.
- This manual is subject to change without prior notice.

GENERAL INFORMATION

- This user's manual is designed for use with your vehicles and contains the instructions you will need to assemble, operate and maintain your vehicles.

- We know you are anxious to start driving, but it is very important that you take time to read the manual even if you are an experienced R/C driver.

- Carefully read and follow all instructions in the manual. Failure to follow the instructions will be considered abuse and/or neglect and may void the warranty.

- Your vehicle is designed to run on uneven or rough terrain. However dust, sand, water and carpet fibres can lodge in the working parts of your cars and can damage your vehicle if not removed promptly. We do not warranty your vehicle from damage due to outside elements including sand, dirt or water. The users are responsible for the maintenance and safe operation of this vehicle.

- This product is not a toy. It is not suitable for users under 14 years old unless they are supervised by adults.

- Never attempt to re-assemble any electronic components. These have been carefully calibrated at the factory.

- Only use manufactured parts to upgrade your car. If you perform a drive train upgrade, replace the entire system (Such as motor, ESC/receiver unit and the like) so that all components are properly matched. Any malfunction incurred by custom modification will void your warranty.

- Before driving your vehicle, please read this manual completely and examine your vehicle and radio control for any defects.

- For better performance, some adjustment may be necessary.

- This vehicle requires one battery pack (included in the car or in the packaging). Make sure the vehicle's batteries have a sufficient charge before driving or possible loss of control may result. The radio controller requires three AA size batteries (not include in the packaging).

- Always remove batteries from the vehicle and the radio controller when not in use.

- Please operate your vehicle in a spacious area. Never operate your vehicle in crowded street.

- This product is fully assembled at factory. We do not take any responsibility for damage and/or accidents that occur as the result of custom modifications and/or incorrect operation.

SAFETY INFORMATION

We want users to enjoy our RC vehicles and to operate them with care. Failure to operate your vehicle in a safe and responsible manner may result in injury to yourself, others or damage to property around you.

- Read and understand all instructions carefully before use and assembly/disassembly.

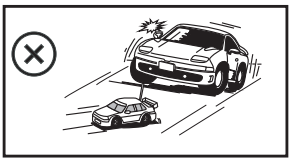

- Do not run your vehicle on public roads or any area where you may encounter pedestrian or vehicle traffic.
- Do not operate in a congested area or in crowds.

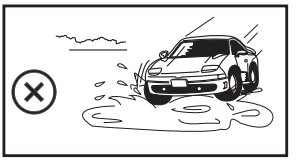

- Do not operate your vehicle with obstructed line of sight, at night, or near water.
- Your vehicle is radio controlled. Radio waves are subject to interference. Radio interference can cause loss of control of your vehicle.

- Take care not to cut yourself while using tools to adjust or upgrade your vehicle.
- Since the model contains many small parts, keep out of reach of children while assembling and/or disassembling.

- When turning off your model, always turn off the receiver (3-in-1 unit) first, before turning off the remote control. Always remove the batteries from your vehicle and the remote control when not in use.
- If your vehicle becomes stuck, release the throttle, then retrieve it by hand.
- Do not continue to apply the throttle or you may damage the motor and/or the ESC/receiver unit.
- Turn off your vehicle and discontinue use if it runs erratically. Not do you run it again until the issue has been found and resolved.

GETTING FAMILIARIZED WITH YOUR 2.4GHz RADIO SYSTEM

Your car is equipped with the new 2.4GHz radio system .Please read and understand all instructions below before operating.

A: Steering Wheel	**1: Steering Trim**	**4: Power Switch**	**7: Throttle Reverse**
B: Trigger	**2: Steering Reverse**	**5: Steering Dual Rate**	**8: Green Indicator**
C: Battery Case	**3: Red Indicator**	**6: Throttle Trim**	**9: Bind(Pair) button**

Steering Wheel: It proportionally operates the model s right and left steering control.

Battery Case: It requires 3pcs of AA size batteries.

Power Switch: It is used to turns the radio controller ON/OFF

Steering Dual Rate Dial: It allows you to change the amount of steering servo travel compared to the amount of physical movement of the steering wheel.

Throttle /Steering Trims: They are used to adjust the center trim of the throttle/steering channel.

Steering Reverse: It allows you to electronically switch the direction of steering servo travel. For example, if you move the steering wheel to the right and the steering servo moves to the left,flip the Steering Reverse Switch to make the steering servo move to the left.

Throttle Reverse : It allows you to electronically switch the direction that the motor operates in relation to the throttle trigger. For example, if you pull the throttle trigger to accelerate forward, but the model goes in reverse, flip the Throttle Reverse Switch to make the model accelerate forward.

Trigger: It controls the speed and braking ability of your car. Pull it to accelerate, release it to decelerate,and push it to brake. Pushing it a second time activates the reverse feature.

Indicators: It shows battery power level.Green indicator flashing means battery power is not enough. As long as bothred and green indicator goes flashing indicating that the radio controller runs out of battery power, you must replace with fresh batteries immediately.

Bind(Pair) button: It is used to bind your 2.4GHz radio system.

BATTERY INSTALLATION

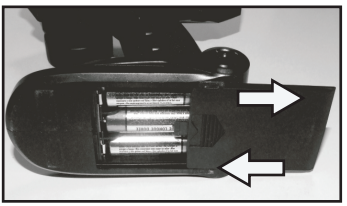

1) Slide the battery cover as shown , and according to the illustrations of polarities, install 3pcs of AA size batteries.
2) Replace the battery cover after batteries are installed.

NOTES:

-Use batteries of same type.
-Remove batteries from the case if not in use.
-Always check the battery power.
-Dispose of exhausted batteries properly.

TO BIND THE RECEIVER TO THE RADIO CONTROLLER

Before running , make sure that the radio controller is bound with the receiver, which have normally been done at factory. If it is not the case, you are require to perform the binding procedure following the instructions below.

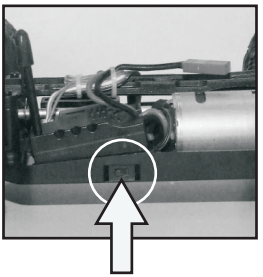

1)Turn on the 3-in-1 unit power switch , which is located on the side of the car.
(Note: Receiver and ESC are combined inside the 3-in-1 unit.)

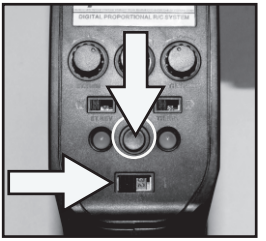

2) Hold the Bind(Pair) key, switching on the radio power.
This operation should be performed within 5 seconds after your receiver is turned on.

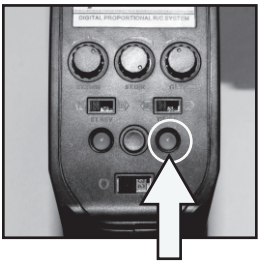

3) Green indicator goes flashing, meaning that the binding process is being performed in system.

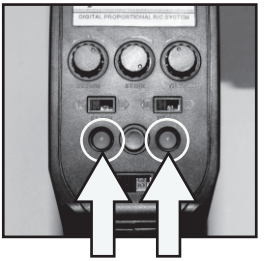

4) Red and green indicators being steady on means that your receiver is bound to your radio controller. Binding process is completed.

RUNNING YOUR CAR

1 TURN ON THE RADIO CONTROLLER

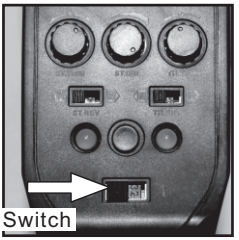

Power Switch

2 TURN ON THE RECEIVER ON YOUR CAR

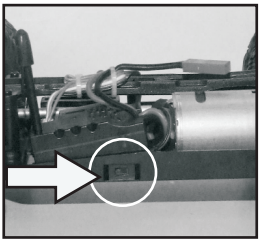

CAUTION

- Before using your car, make sure the radio controller is of enough battery power. Low battery power will lead to the loss of control of your car.
- Always turn on the remote controller firstly, and then the receiver.

3 CHECK STEERING PERFORMANCE

- Ensure good steering performance.

1) To keep the car run straight in line , do not move the control wheel.(Keep it at centre)

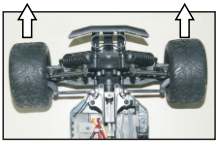

2) Turn it left to allow your vehicle turn to left.

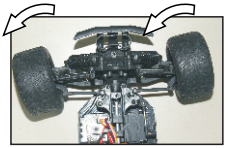

3) Turn it right to allow your vehicle turn to right.

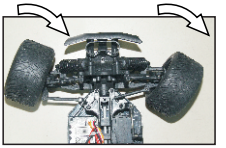

4 CHECK TRIGGER RESPONSE

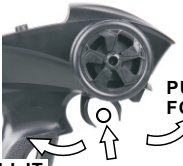

A. Pull the trigger back to accelerate, release it to decelerate and push it to brake.

B. To stop running your car, release the trigger to Neutral.

C. Pushing the trigger a second time activates the reverse feature.

5 TO TUNE THE STEERING TRIM

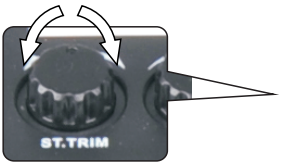

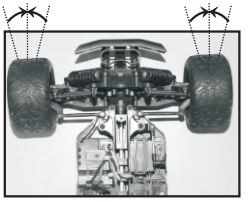

Gently pull the trigger to allow your car to run slowly. Meantime, tune the steering trim to allow the front wheels to be aligned.

6 TO TUNE THE STEERING DUAL RATE CONTROL DIAL

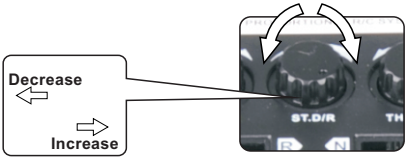

STEERING D/R

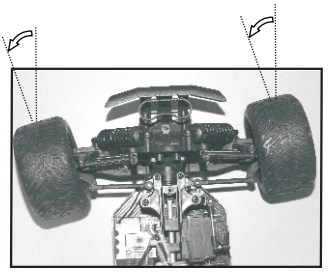

This dial adjusts the overall travel of the steering servo. Push the dial forward for maximum steering. Pull the dial back to reduce the steering level.

- Set the Steering Dual Rate Control Dial to Minimum first. To set the desired steering level increase it again whilst decelerating your vehicle.

RUNNING PRACTICE

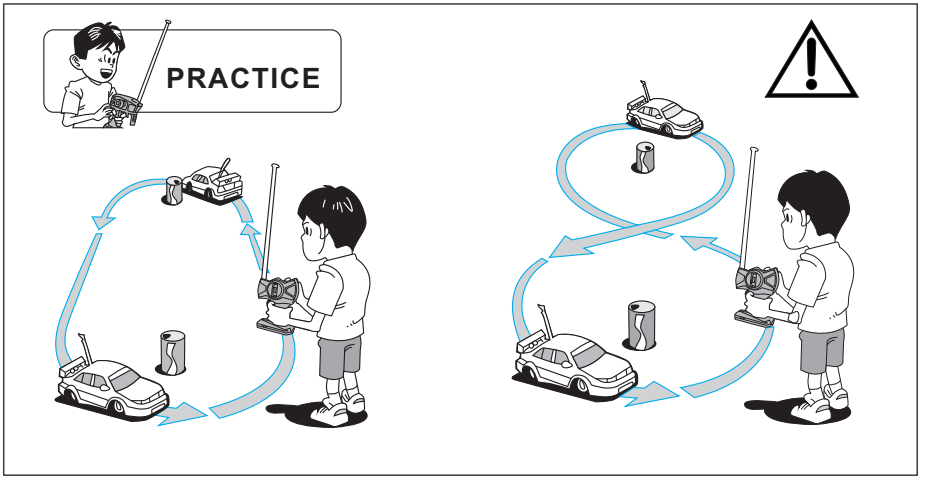

Once you become conformable driving the vehicle, perform driving practice on the tracks as shown in the figure.

Keep practising until you feel comfortable with the steering, throttle and brake at low speeds. Once you are feeling comfortable try operating on another track.

When you have mastered the basics you will be able to drive at higher speeds in a more controlled fashion.

CHARGING THE BATTERY PACK

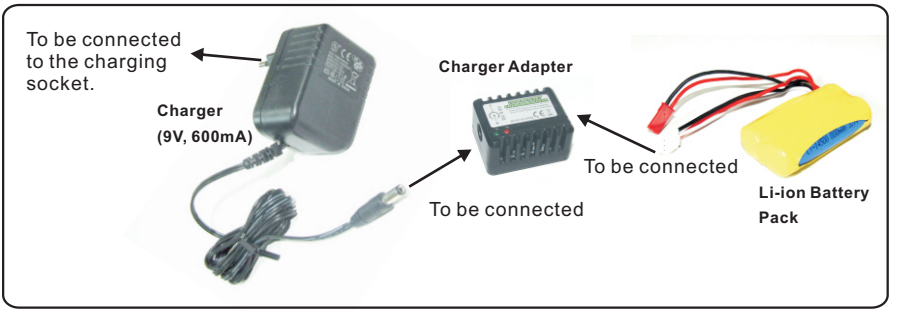

-Use only the specified charger (9V,600mA) to charge the Li-ion battery pack.

- The charger adapter is needed during charging, on which on the one side the charger is connected and on the other side the battery pack is connected.
- Never charge the battery pack unattended.
- Always remove the battery pack from the car before charging.
- Always use the battery pack after it is fully charged.

-Charging time is normally around 2 hours and a half.

-The red indicator on the adapter lights up, which means charging is being performed.

- As long as charging is complete, the green indicator lights up.

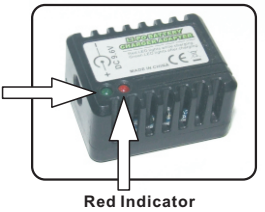

STOPPING YOUR CAR

1 TURN OFF THE RECEIVER ON YOUR CAR

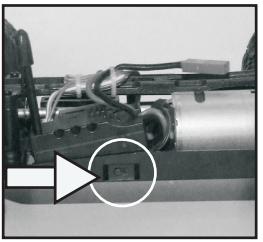

2 TURN OFF THE RADIO CONTROLLER

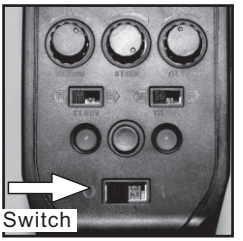

CAUTION

- Always switch off the receiver ,and then the radio controller.

3 REMOVE BATTERIES

- Do not forgot to remove batteries from your car and radio controller when not in use.

MAINTAINING YOUR CAR

After running your car, the following procedures should be performed regularly and will help to maintain your car's performance.

- Inspect your car for any obvious damage.
- Check the gears for wear, debris or broken/slipping teeth.
- Check the wheels and tighten the wheel screws properly.
- Check for loose screws in the chassis.
- Check the wiring for frayed or damaged wires or connectors.
- Check the steering servo which will wear out over time and require replacement.
- Check all batteries.
- Keep the chassis clean and free of sand, dust and moisture.
- Remove and clean the motor if necessary. (Never attempt to re-assemble the motor, you will damage it and void the warranty).
- Clean the car body with a soft lint-free cloth.
- Remove all batteries if you are from the car when not in use.

TROUBLESHOOTING

A. The vehicle does not work at all.	1. Check to see if transmitter and car are on. 2. Check to see if TX/RX are properly bound. 3. Adjust throttle trim on transmitter 4. Replace batteries.
B. The vehicle runs slow.	1. Replace or charge the battery pack and/or the radio batteries. 2. Make sure the vehicle is geared properly and the pinion and spur gear are over tightened. 3. Clean all bushings or ball bearings. 4. Check for stripped or dirty gears.
C. The throttle works, but it can not steer.	1. Check if the servo feels jammed, try centering it by hand. 2. Check the whole steering system.
D. It steers, but throttle is uncontrollable.	1. Adjust the throttle trim. 2. Replace or charge the battery pack and/or the radio batteries.
E. The vehicle runs noisily.	1. Check gear mesh between spur gear and pinion. 2. Check for stripped and/or dirty gears. 3. Clean and oil bushings or ball bearings.

ITEM NO.: 16810

2PCS
Steering Bush+ Steering Post +E-clip(2mm/4mm)

ITEM NO.: 16003

4PCS
Suspension Hinge Pins-Outside

ITEM NO.:16004

4PCS
Suspension Hinge Pins-Inside

ITEM NO.: 16005

4PCS
Shock Coils

ITEM NO.: 16006

2PCS
Drive Shafts (Fr./Rr.)

ITEM NO.: 16007

2PCS
Steering Load Spring

ITEM NO.: 16008

12PCS
Brass Bushes (5*8*2.5mm)

ITEM NO.: H011

6PCS
Ball Bearings (5*8*2.5mm) 6P

ITEM NO.: H030

6PCS
Ball Bearings (7*11*3mm) 6P

ITEM NO.: 16811

6.3*12.5*0.2mm(16P)
Washers

ITEM NO.: 16012

Servo Linkage Set

ITEM NO.: 16013

12PCS
O-Ring (For Spur Gear)

ITEM NO.: 16014

8PCS
Steering Hub Step Screws

ITEM NO.: 16015

Chassis

ITEM NO.: 16016

Upper Deck+ Motor Mount Guard

ITEM NO.: 16017

Front Gear Box Assembly+ Rear Gear Box Cover

ITEM NO.: 16018

Servo Guard+ Battery Cover+ Motor Mount

ITEM NO.: 16020

Diff. Gears + Diff. Case

ITEM NO.: 16021

Front Lower Suspension Arm (left/Right)

ITEM NO.: 16022

Rear Lower Suspension Arm (left/Right)

ITEM NO.: 16023

Front Upper Linkage Set (2P)
Rear Upper Linkage Set (2P)
Steering Linkage Set (2P)

ITEM NO.: 16024

4PCS
Shocks Assembly

ITEM NO.: 16025

Steering Assembly + Antenna Mount+Servo Arm +Gear Bush

ITEM NO.: 16026

Diff. Outdrive Cups (4P) + Wheel Shafts 4P(Fr./Rr.)

ITEM NO.: 16027

Steering Knuckles (Left/Right) +Rear Hub Carriers (Left/Right)

ITEM NO.: 16028

Front Hub Carriers(Left/Right)

ITEM NO.: 88021

13PCS
Ball Joint Set (Φ3.8mm)

ITEM NO.: 16047

Diff. Assembly- Complete (Fr./Rr.)

The images may vary from the received items.

ITEM NO.: 16048

Motor RC 380 (25000rmp)

ITEM NO.: 16049

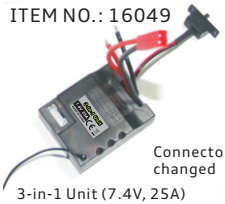

Connector changed

3-in-1 Unit (7.4V, 25A)

ITEM NO.: 16050

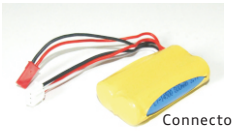

Connector changed

Li-ion Battery Pack (7.4V, 800mAH)

ITEM NO.: 16051

5-Wire Servo (19g)

ITEM NO.: H021

12PCS

Small Body Clips A/B

ITEM NO.: P011

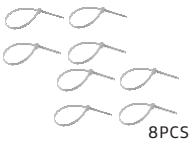

8PCS

Small Zip Ties

ITEM NO.:P100

12PCS

Body Clip Cushions

ITEM NO.:16070

Charger Adaptor

ITEM NO.:16073

8PCS

Motor Mount Washers (2.6*6*0.3mm)

ITEM NO.:16081

8PCS

Gear Box Washers (8.2*10.6*0.3mm)

ITEM NO.: E770

3-In-1 2.4GHz radio controller (60M)

ITEM NO.: P019

2PCS

Receiver Antenna Pipe

ITEM NO.: S011

12PCS

Countersunk Self Tapping Screw 2*15mm

ITEM NO.: S013

12PCS

Countersunk Screw 2.5*8mm

ITEM NO.: S016

12PCS

Set Screw M3*3mm

ITEM NO.:S020

12PCS

Countersunk Self Tapping Screw 2.6*8mm

ITEM NO.: S029

12PCS

Washer Head Self Tapping Screw 2.6*10mm

ITEM NO.: S061

12PCS

Countersunk Self Tapping Screw 2.6*6mm

ITEM NO.: S062

12PCS

Countersunk Screw 3*10mm

ITEM NO.: S089

12PCS

Washer Head Self Tapping Screw 2.6*6mm

ITEM NO.:S091

12PCS

Washer Head Screw 2.5*22mm

ITEM NO.: S100

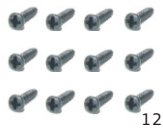

12PCS

Washer Head Screw 2.5*8mm

ITEM NO.: S120

12PCS

Flange Head Self Tapping Screw 2.3*4mm

ITEM NO.: S138

12PCS

Countersunk Self Tapping Screw 2.6*10 mm

ITEM NO.:S149

12PCS

Flange Head Self Tapping Screw 2*8mm

ITEM NO.: 16057

TRUGGY /MONSTER TRUCK ONLY

Motor Pinion(13T)+ Set Screw (3*3mm)

ITEM NO.:16058

BUGGY ONLY

Motor Pinion(16T)+ Set Screw (3*3mm)

ITEM NO.: S153

12PCS

Countersunk Screw 2.5*5mm

The images may vary from the received items.

ITEM NO.: 16001
BUGGY /TRUGGY ONLY

Centre Drive Shaft

ITEM NO.:16090
MONSTER TRUCK ONLY

Centre Drive Shaft
(Needed for installing slipper clutch)

ITEM NO.: 16019
BUGGY /TRUGGY ONLY

Spur Gear

ITEM NO.: 16091
MONSTER TRUCK ONLY

Slipper Spur Gear Unit

ITEM NO.:16093
MONSTER TRUCK ONLY

Slipper Clutch Pads/Disks

ITEM NO.:16094
MONSTER TRUCK ONLY

Slipper Clutch Spring/Ball Bearing/Locks + O-ring + Shim

ITEM NO.:16036
BUGGY ONLY

Wheel Hex.(Buggy)

ITEM NO.: 16037
TRUGGY / MONSTER TRUCK ONLY

Wheel Hex.(Truggy/Monster Truck)

ITEM NO.: 16029
BUGGY /TRUGGY ONLY

2PCS
Diff. Pinion Gears

ITEM NO.: 16092
MONSTER TRUCK ONLY

Diff. Pinion Gears
(Needed for installing slipper clutch)

ITEM NO.: 16030
TRUGGY / MONSTER TRUCK ONLY

4PCS
Body Posts (Fr./Rr.)

ITEM NO.: 16031
BUGGY ONLY

2PCS
Body Posts (Fr./Rr.)

ITEM NO.:16032
BUGGY ONLY

Front Shock Tower+Rear Shock Tower

ITEM NO.: 16033
TRUGGY/ MONSTER TRUCK

Front Shock Tower+Rear Shock Tower

ITEM NO.: 16034

Front Bumper(Buggy)+
Rear Bumper(Buggy/Truggy /Monster Truck)

ITEM NO.: 16035
TRUGGY / MONSTER TRUCK ONLY

Front Bumpers+Bumper Brace

ITEM NO.: 16038
BUGGY ONLY

Off Road Wing +Wing Stay

ITEM NO.: 16039W
BUGGY ONLY

White Wheel Rims (Fr./Rr.)

ITEM NO.:16039K
BUGGY ONLY

Black Wheel Rims (Fr./Rr.)

ITEM NO.: 16040
BUGGY ONLY

Pin Tires +Sponge (Buggy)

ITEM NO.: 16041W
BUGGY ONLY

W/white rims
Wheels Complete(Buggy)

ITEM NO.: 16041K
BUGGY ONLY

W/black rims
Wheels Complete(Buggy)

ITEM NO.:16042W
TRUGGY / MONSTER TRUCK ONLY

White Wheel Rims (Fr./Rr.)

ITEM NO.: 16042K
TRUGGY / MONSTER TRUCK ONLY

Black Wheel Rims (Fr./Rr.)

ITEM NO.: 16043
TRUGGY ONLY

Flame Tires +Sponge (Truggy)

ITEM NO.: 16044W
TRUGGY ONLY

W/white rims
Wheels Complete(Truggy)

ITEM NO.:16044K
TRUGGY ONLY

W/black rims
Wheels Complete(Truggy)

ITEM NO.: 16045
MONSTER TRUCK ONLY

TREAD TIRES+SPONGE (Truck)

The images may vary from the received items.

ITEM NO.: 16046W ***MONSTER TRUCK ONLY*** ***W/white rims*** Wheels Complete(Truck)	ITEM NO.: 16046K ***MONSTER TRUCK ONLY*** ***W/black rims*** Wheels Complete(Truck)		
ITEM NO.:16071 ***BUGGY ONLY*** 8PCS Wheel Nut Screws (2.6*12mm)	ITEM NO.:16072 ***TRUGGY / MONSTER TRUCK ONLY*** 8PCS Wheel Nut Screws (2.6*15mm)	ITEM NO.: S128 ***BUGGY ONLY*** 12PCS Countersunk Self Tapping Screw 2.3*6mm	ITEM NO.:S150 ***BUGGY ONLY*** 12PCS Round Head Self Tapping Screw 2.6*8mm
ITEM NO.: 16052 ***EUROPE STANDARD*** Charger (EU STANDARD), 9V, 600mA	ITEM NO.: 16053 ***AMERICA STANDARD*** Charger (AMERICA STANDARD), 9V, 600mA	ITEM NO.:16054 ***U.K. STANDARD*** Charger (U.K. STANDARD), 9V, 600mA	ITEM NO.: 16055 ***AUSTRALIA STANDARD*** Charger (AUSTRALIA STANDARD),9V, 600mA

OPTIONAL PARTS

1-16 FOUR WHEEL DRIVE VEHICLES

ITEM NO.: 16800 Alum.Capped Oil Filled Shocks. + Ball Joints (Fr./Rr.)	ITEM NO.: 16801 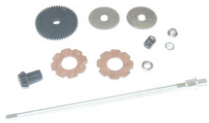 Slipper Clutch Assembly + Modified rear diff.pinion gear + Modified Centre Drive Shaft	ITEM NO.: 16802  Brushless Motor	ITEM NO.:16803 Brushless ESC
ITEM NO.: 16804 6PCS Ball Bearings (8*12*3.5mm) 6P	ITEM NO.: 16805 Motor Cooling Heat Sink	ITEM NO.: 16806 Brushless ESC Cooling Fan + Mounting Screws(4P)	ITEM NO.: E775 The pannel and the control wheel in color of titanium 2.4GHz radio controller (150M)
ITEM NO.: E710 Independent 2.4GHz Receiver			

ITEM NO.: 16801= ITEM NO.: 16090 +ITEM NO.: 16091 +ITEM NO.: 16092+ITEM NO.: 16093+ITEM NO.: 16094

Warning: If you perform a drive train upgrade, replacethe entire system (Such as motor, ESC/receiver unit and the like) so that all components are properly matched. Any malfunction incurred by custom modification will void your warranty.

The images may vary from the received items.

UNITS ASSEMBLY VIEW

SHOCK ASSEMBLY

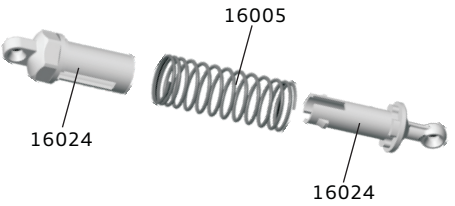

FINISHED

SERVO INSTALLATION

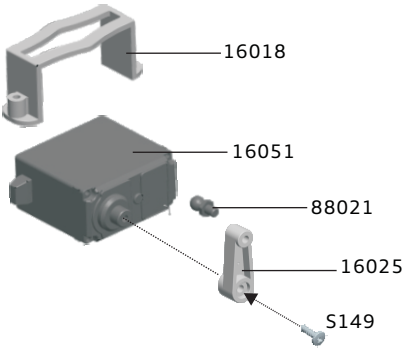

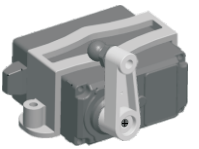

FINISHED

DIFF. ASSEMBLY (Fr./Rr.)
BUGGY/TRUGGY ONLY

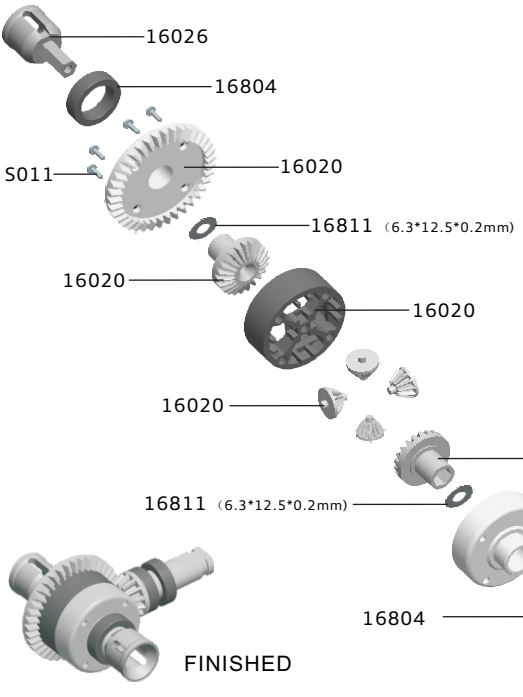

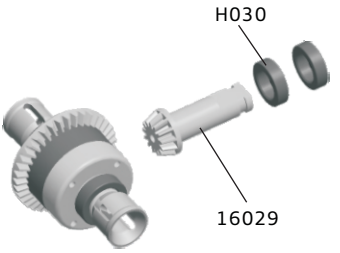

FINISHED

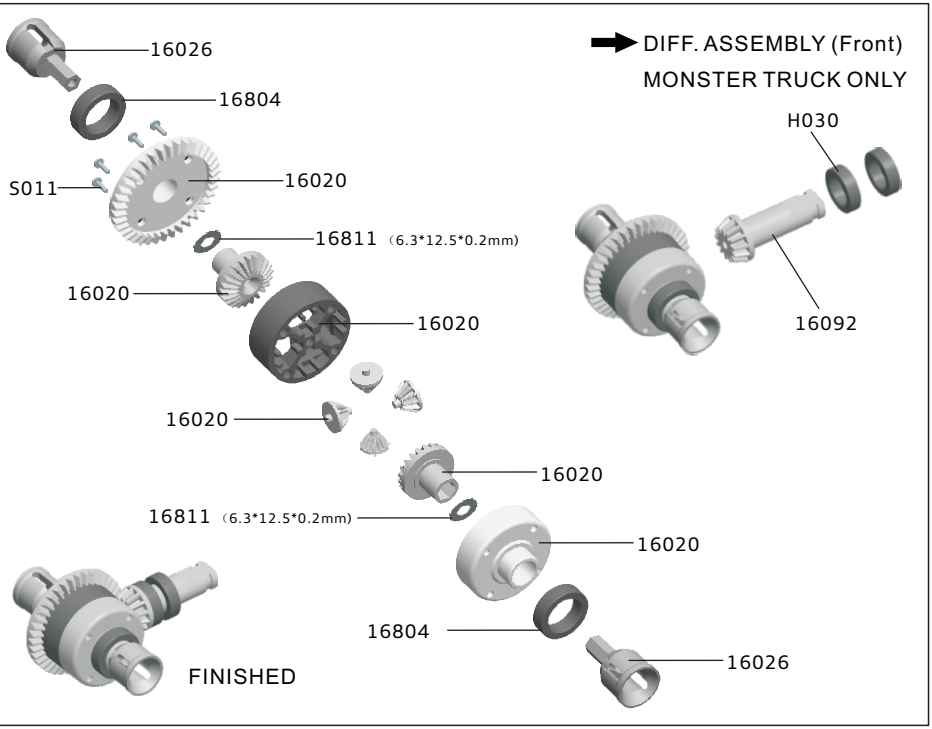
DIFF. ASSEMBLY (Front)
MONSTER TRUCK ONLY
16026
16804
S011
16020
16811 (6.3*12.5*0.2mm)
16020
16020
16020
16020
16811 (6.3*12.5*0.2mm)
16020
16804
16026
H030
16092
FINISHED

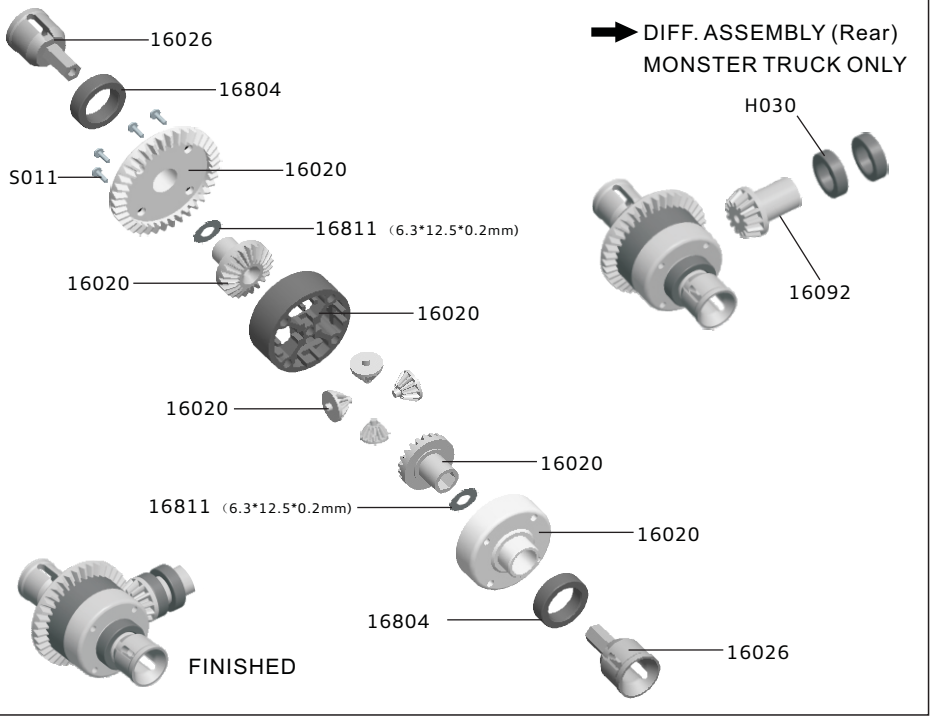
DIFF. ASSEMBLY (Rear)
MONSTER TRUCK ONLY
16026
16804
S011
16020
16811 (6.3*12.5*0.2mm)
16020
16020
16020
16020
16811 (6.3*12.5*0.2mm)
16020
16804
16026
H030
16092
FINISHED

STEERING ASSEMBLY VIEW

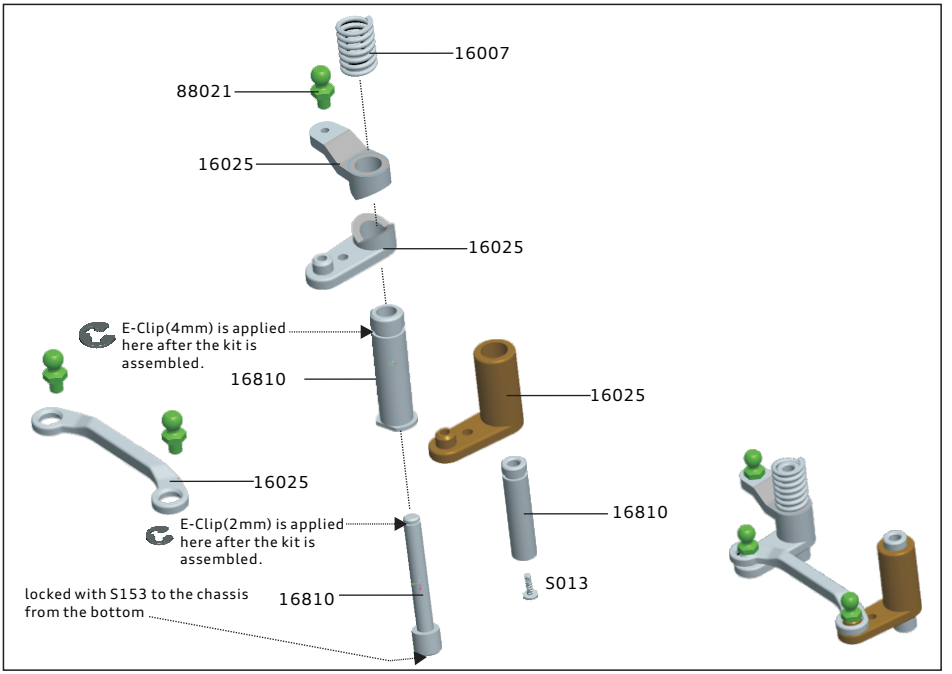

MONSTER TRUCK ONLY

(It can be an optional part for buggy or truggy)

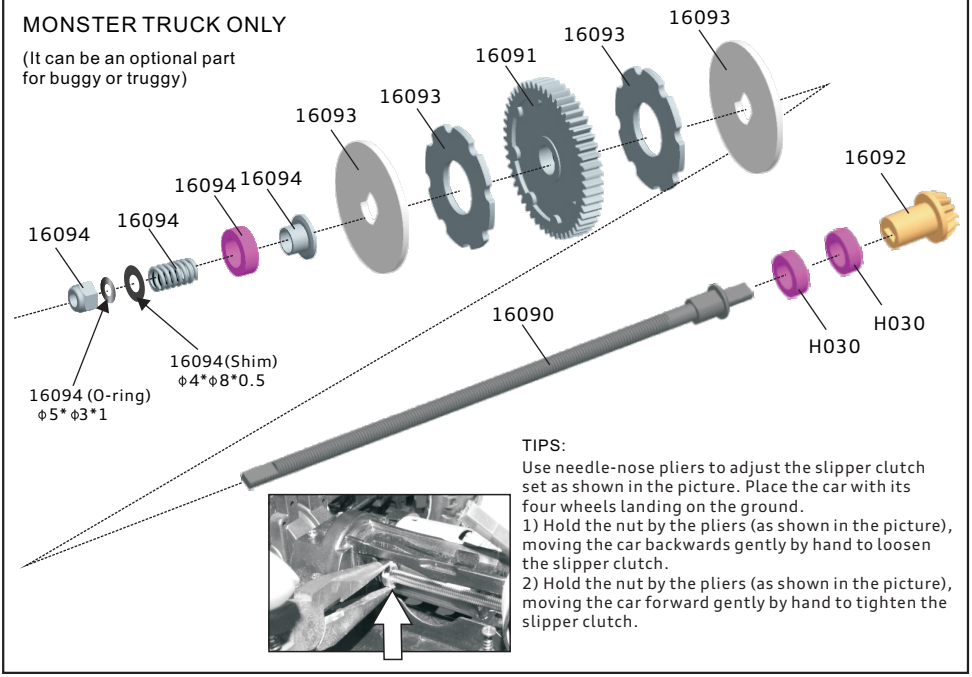

TIPS:

Use needle-nose pliers to adjust the slipper clutch set as shown in the picture. Place the car with its four wheels landing on the ground.

1) Hold the nut by the pliers (as shown in the picture), moving the car backwards gently by hand to loosen the slipper clutch.

2) Hold the nut by the pliers (as shown in the picture), moving the car forward gently by hand to tighten the slipper clutch.

EXPLODED VIEW

1-16TH SCALE 4WD ELECTRIC OFF ROAD BUGGY

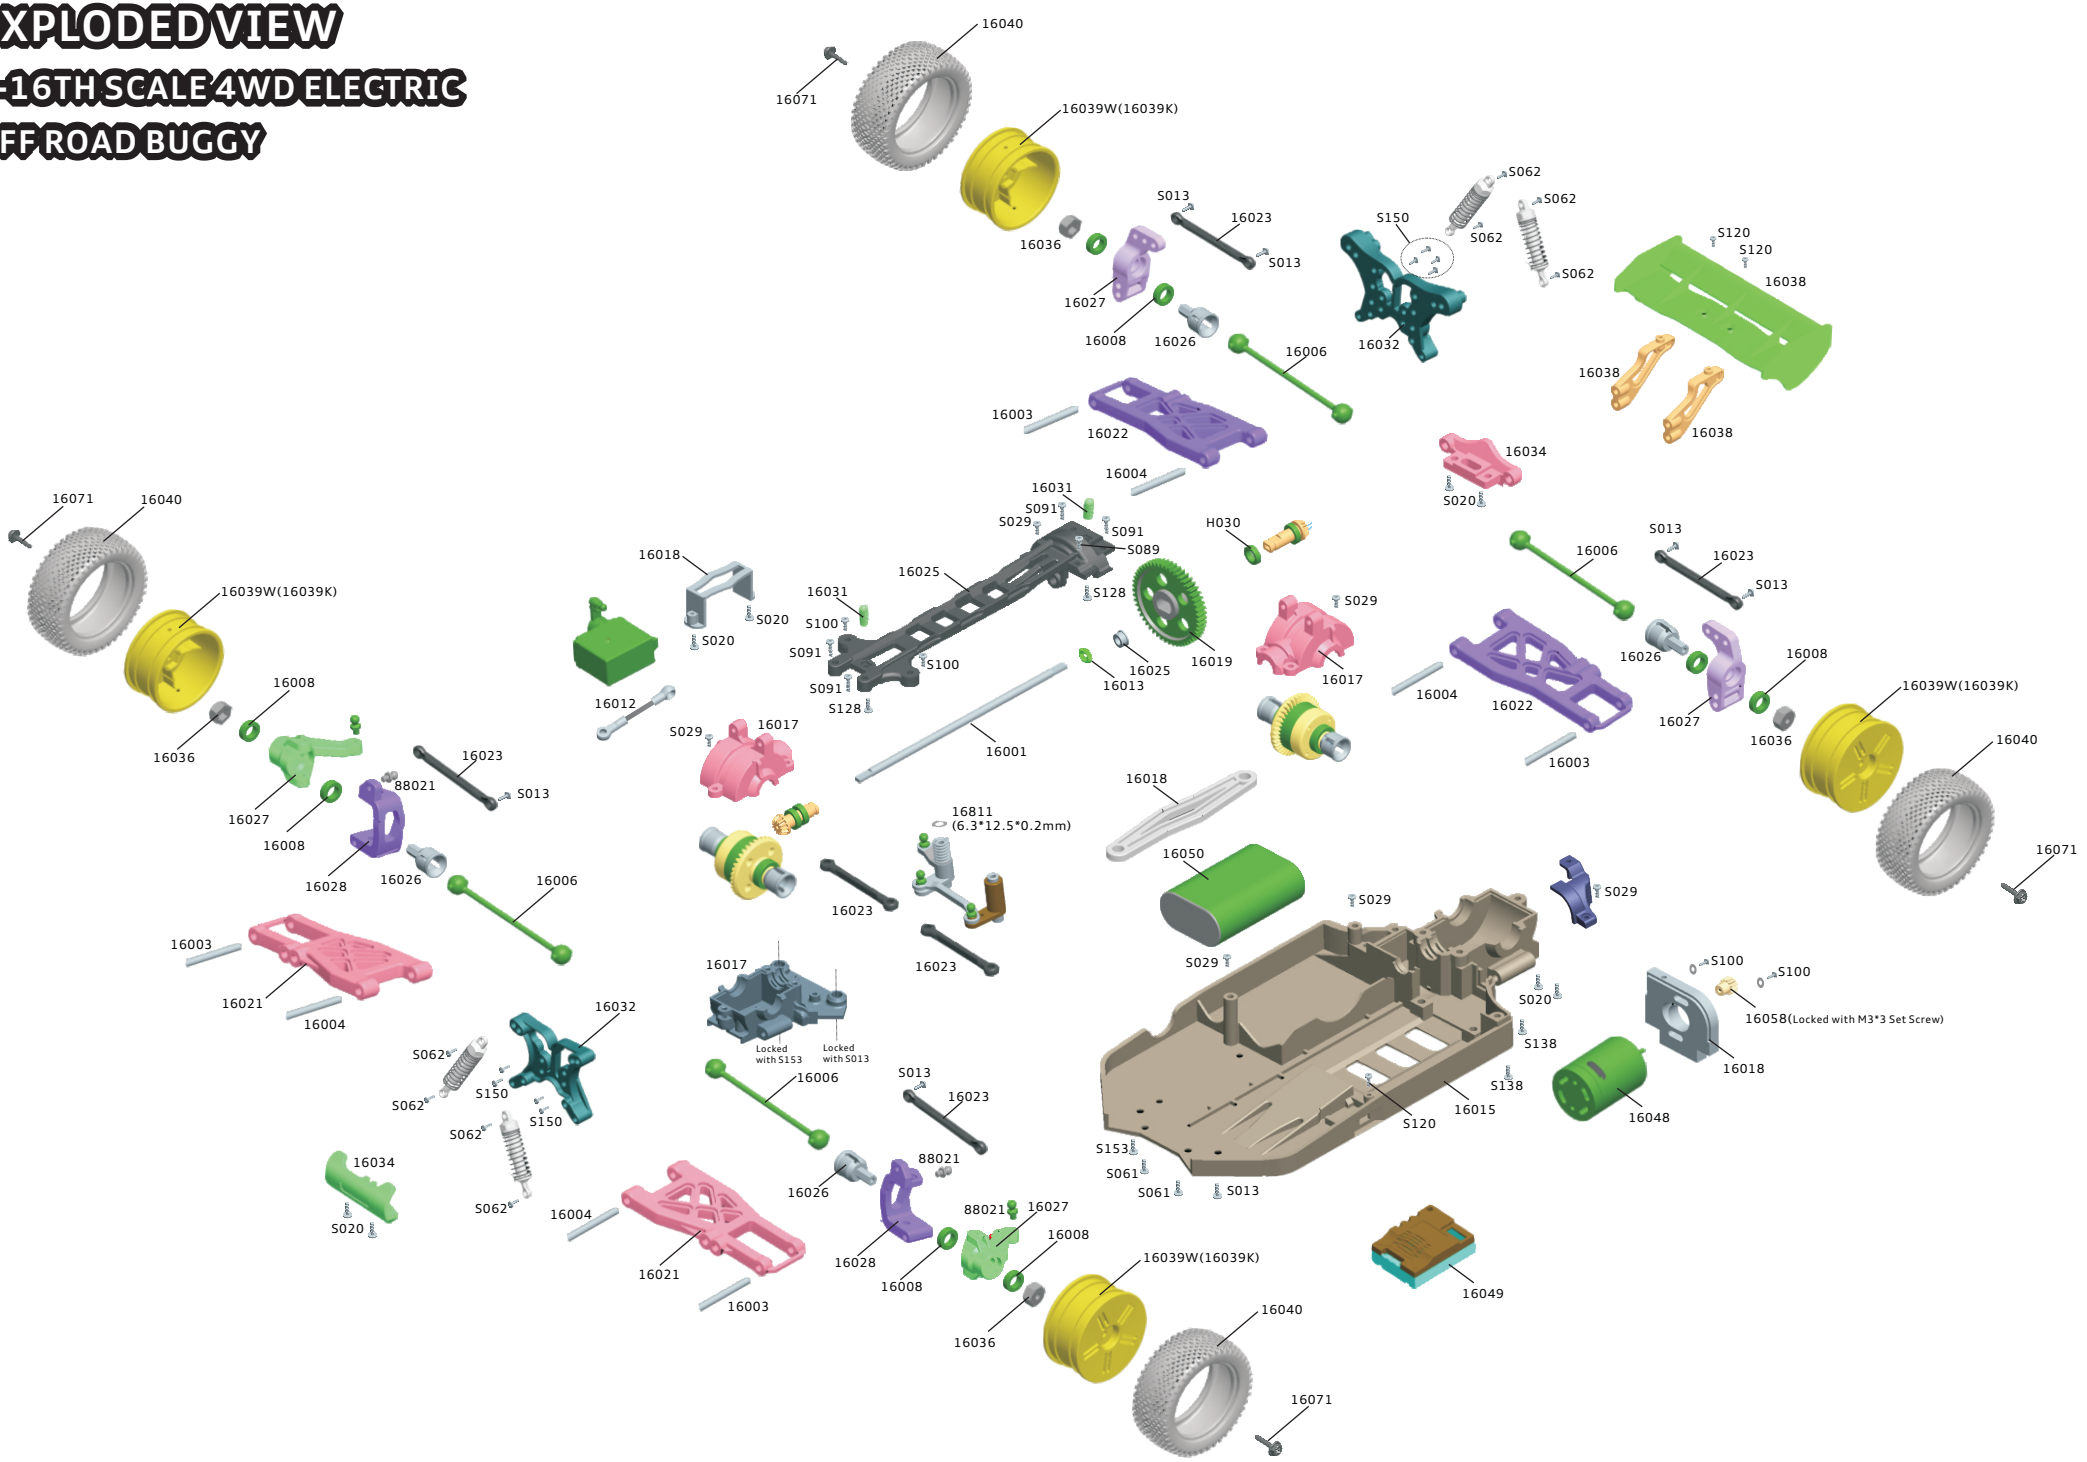

EXPLODED VIEW

1-16TH SCALE 4WD ELECTRIC OFF ROAD TRUGGY

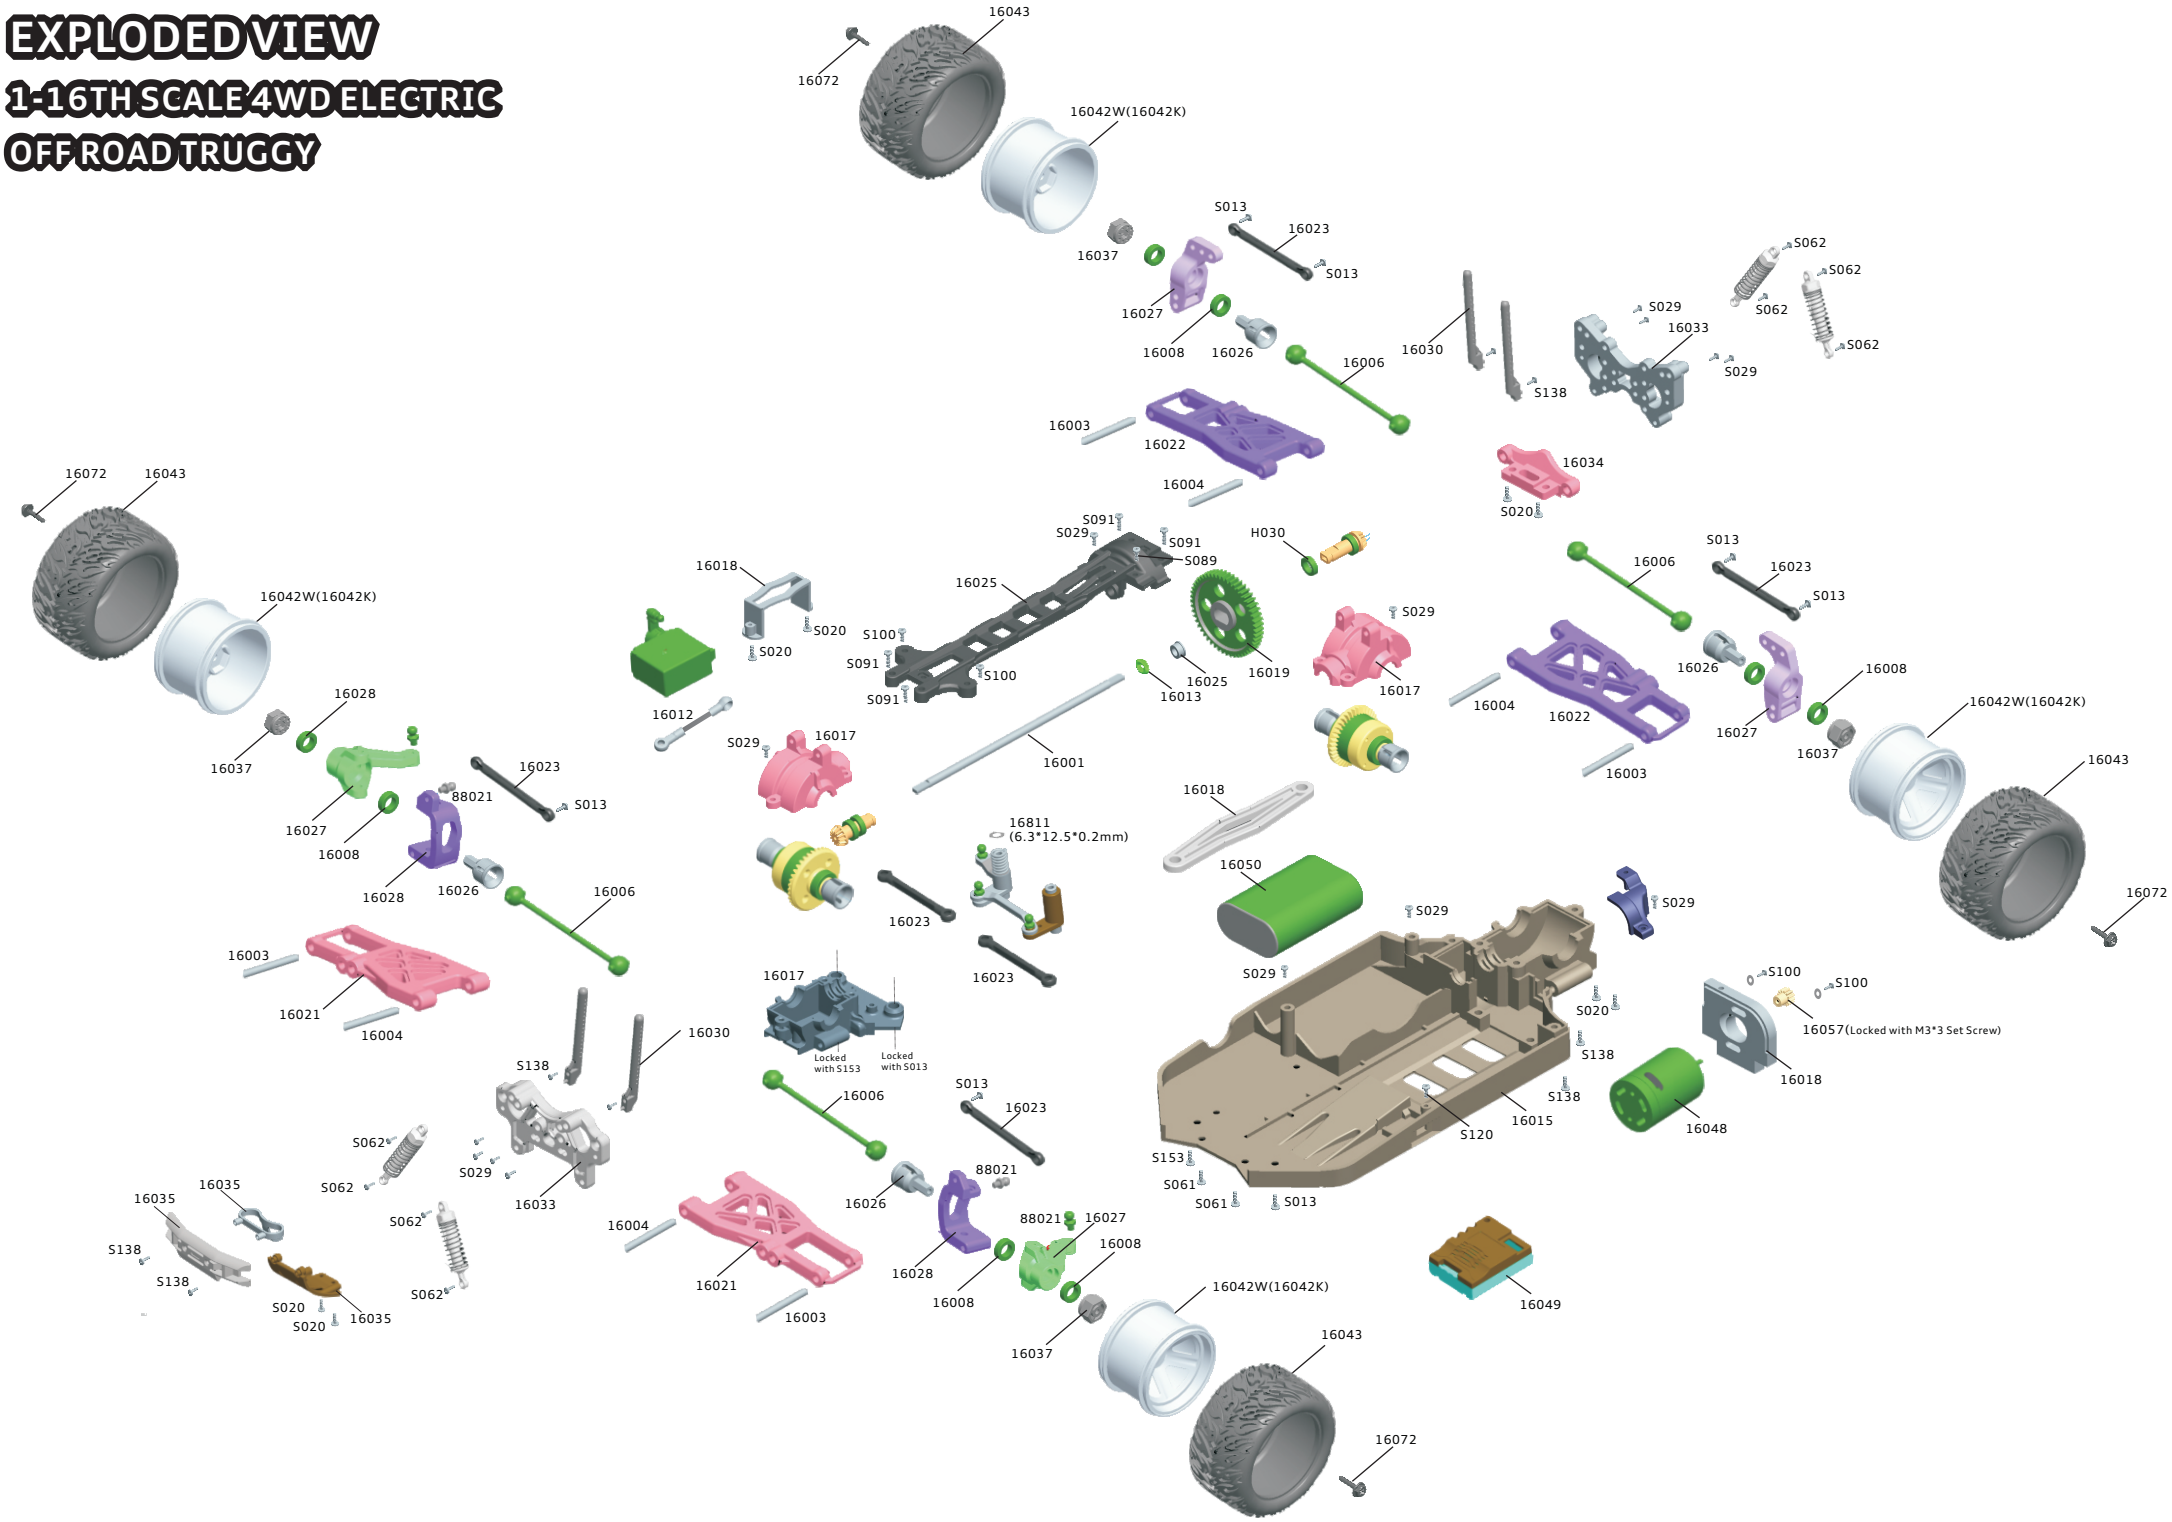

EXPLODED VIEW

1-16TH SCALE 4WD ELECTRIC OFF ROAD MONSTER TRUCK

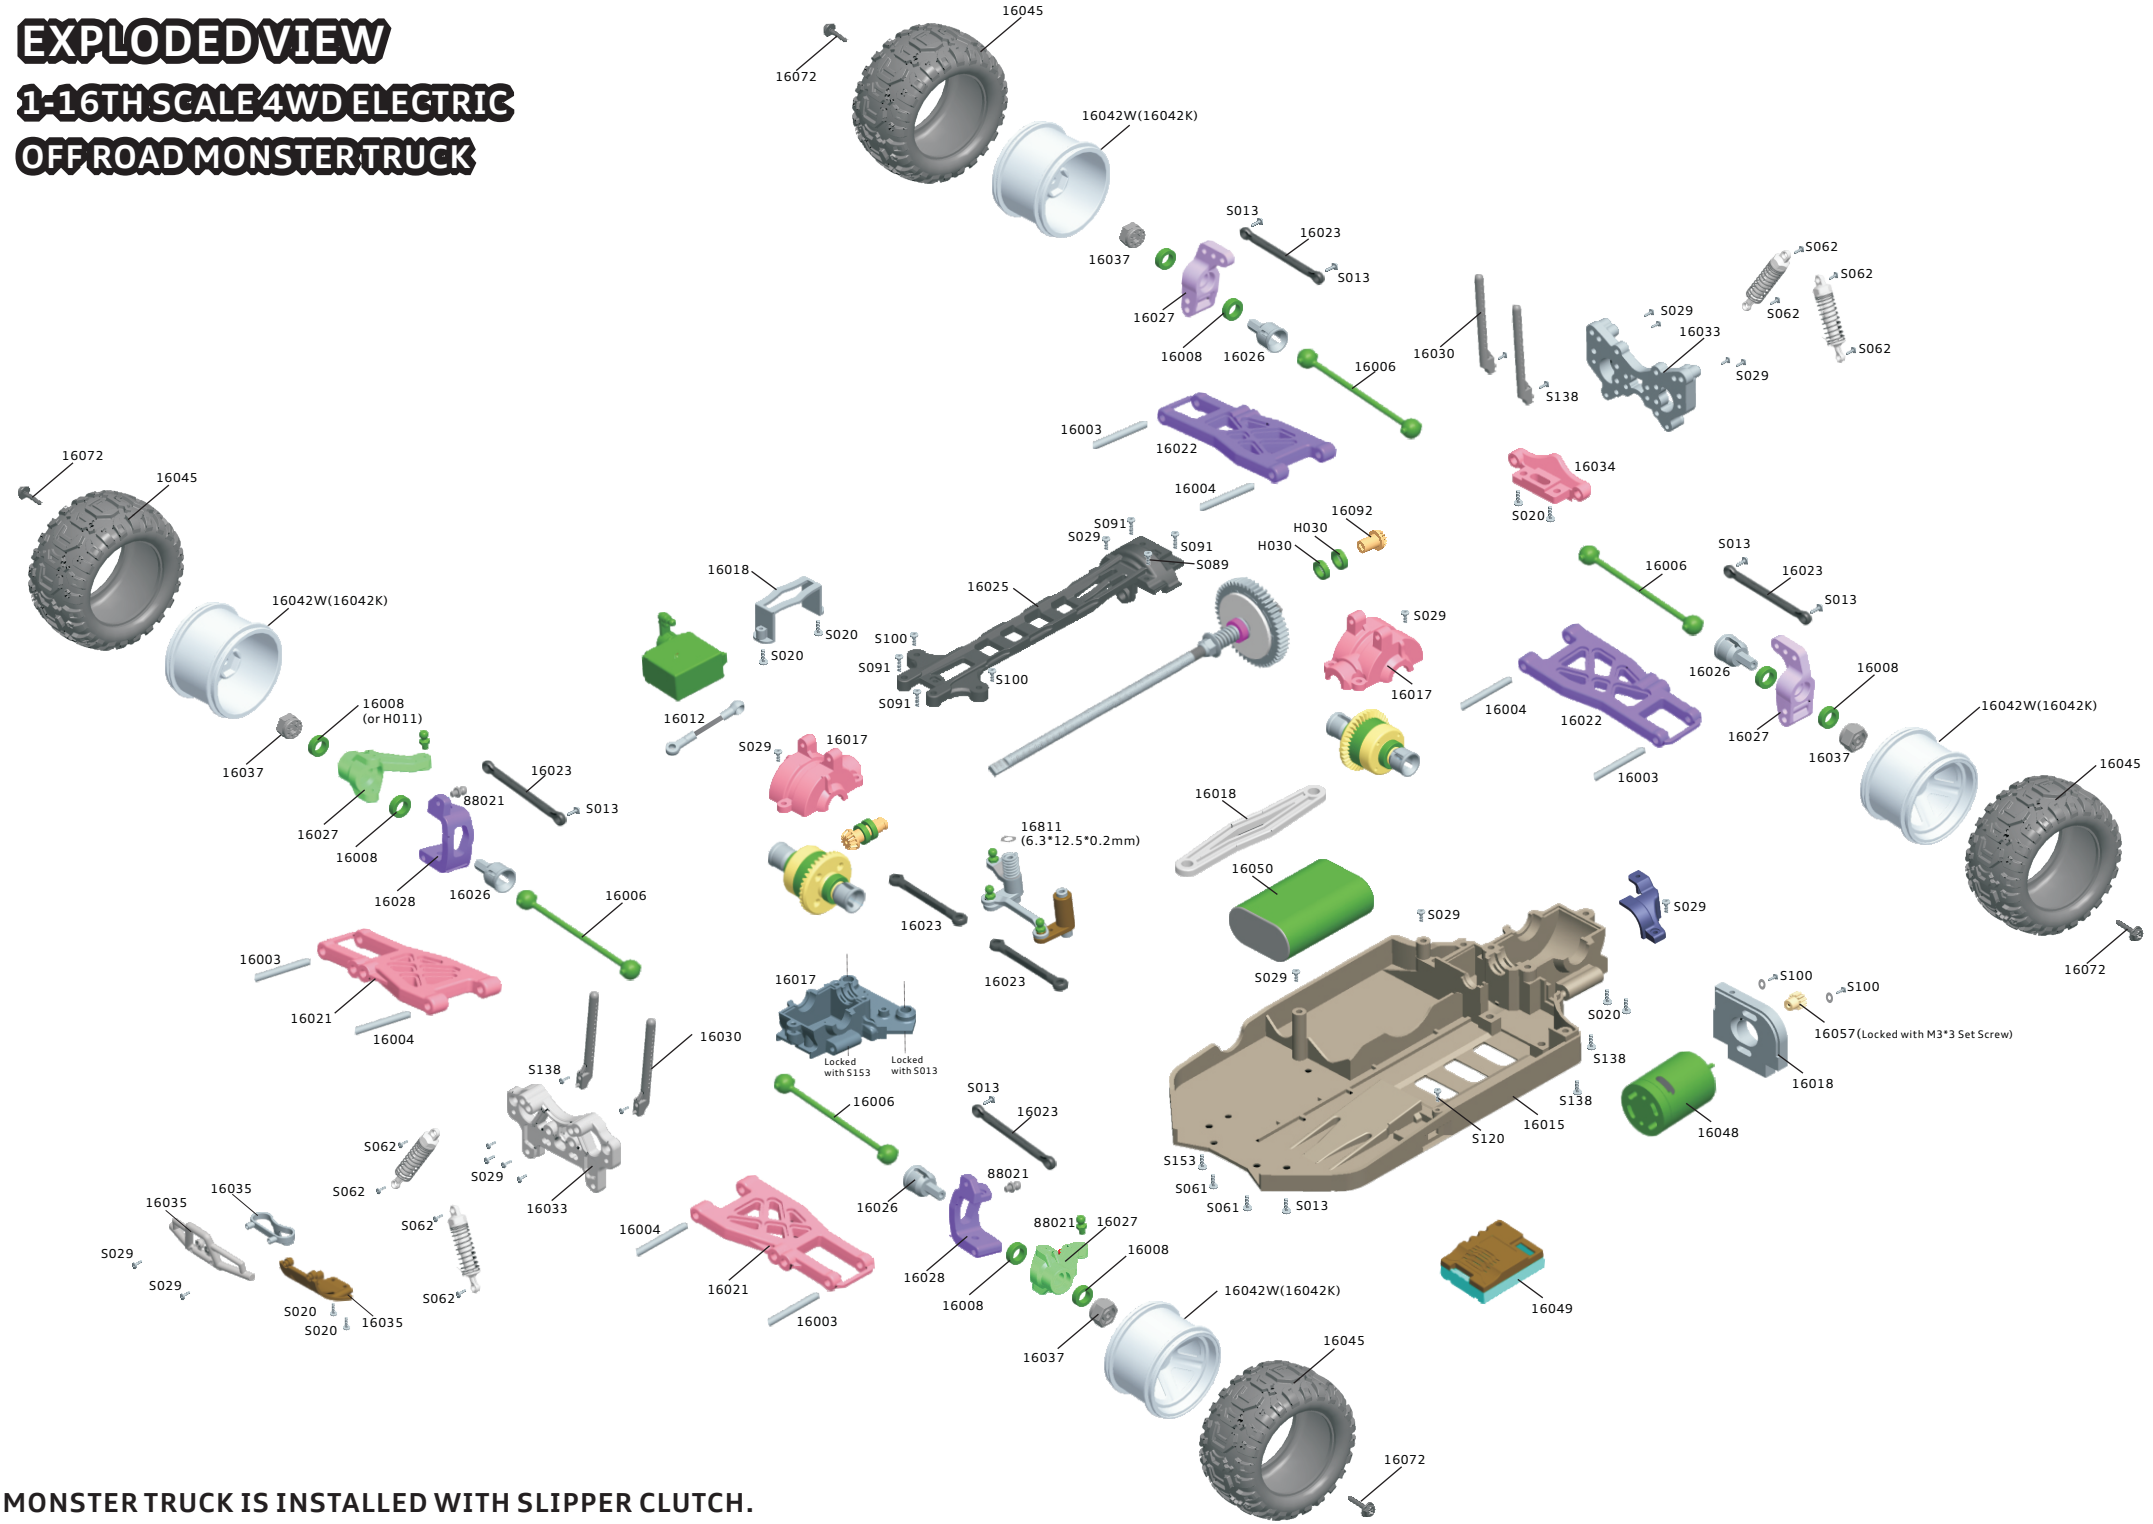

MONSTER TRUCK IS INSTALLED WITH SLIPPER CLUTCH.

Please completely read and understand the entire manual before using, assembling and/or disassembling your remote controlled car.

Thank for purchasing our product.
This product is an authentic remote controlled vehicle (RC vehicle). It is not a toy.
Read and understand this instruction manual thoroughly before operating the vehicle.
If you are not familiar with RC vehicles, we recommend that seek out RC experts for reliable advice.

WARNINGS

-This R/C vehicle is intended for persons over 14 years of age. Children under 14 years of age should only operate this car under adult supervision.

-To avoid losing control of your car, do not operate near other electric remote controlled products.

-Please operate your vehicle in a spacious area. Never operate your vehicle in crowded street.

-This product is fully assembled at factory. We do not take any responsibility for damage and/or accidents that occur as the result of custom modifications and/or incorrect operation.